

## 67XXU Communication Addendum

1. Power on the indicator by pressing and holding the [ON/OFF] key. The display will go through a display test then go into regular weigh mode.
2. Press the [HOLD] + [ON/OFF] key for 3 seconds. The indicator shows **CONFG** to indicate that you are in Setup Menu mode.
3. Press the [UNIT] key and the indicator's display shows **USER**
4. Press the [TARE] key and the indicator's display shows **RESET**
5. Press the [UNIT] key until you see the com port you are using for your software; **CON1** (USB port) or **CON2** (serial port)
6. Press the [TARE] key to select your com port.
7. The indicator's display shows **baudrE**, press the [TARE] key go into that setting, and confirm the appropriate baud rate for your software. To toggle to another baud rate setting, press the [UNIT] key until you see the one that is needed. I.E. 1200, 2400, 4800, 9600, 19200, 38400
8. Press the [TARE] key and the indicator's display shows **baudrE**; press the [UNIT] key and the indicator's display shows **bitFnt**. press the [TARE] key for that setting, and confirm it is the appropriate bit format for your software. To toggle to another bit format setting, press the [UNIT] key until you see the one that is needed. I.E. 8n1, 7E1, 7O1
9. Press the [TARE] key and the indicator's display shows **bitFnt**. Press the [UNIT] key and the indicator's display shows **LYoUe** and the indicator's display is shown.
10. Press the [TARE] key to go down into your selection and press the [UNIT] key until the display shows correct protocol that you are needing for your software. \*Most common are **SCPO1** = NCI protocol, **SCPO2** = ECR protocol, **SCPO3** = Toledo 8213 or **ibn** = IBM protocol.
11. Press the [TARE] and the indicator's display should show you **LYoUe**
12. Press the [ZERO] to the indicator's display should return to the com port that you were changing.
13. \*Press the [UNIT] key to the indicator's display shows **altHEr**
14. \*Press the [TARE] key until the indicator's display shows **ALdrG**
15. \*Press the [UNIT] key to the indicator's display shows **LEGACY**
16. \*Press the [TARE] key and the indicator's display will show a number.
17. \*Press the [UNIT] key to the indicator's display shows you a 2
18. \*Press the [TARE] key and the indicator's display shows you **LEGACY**
19. Press and release [ZERO/ON/OFF] key; until you are all the way out and into the normal weigh mode.
20. Test scale with software. If scale fails communication, contact Brecknell Tech Support at 800-242-2807 for further testing.

**\*Note: For software 1.20 and up**



**Brecknell – USA**  
1000 Armstrong Drive,  
Fairmont, MN 56031-1439 USA  
service@brecknellscales.com  
Toll free 800-637-0529

**Brecknell – UK**  
Foundry Lane, Smethwick,  
West Midlands B66 2LP UK  
sales@brecknellscales.co.uk  
+44 (0) 845 246 6717