


Brecknell

PS1000 / PS2000

Floor Scales

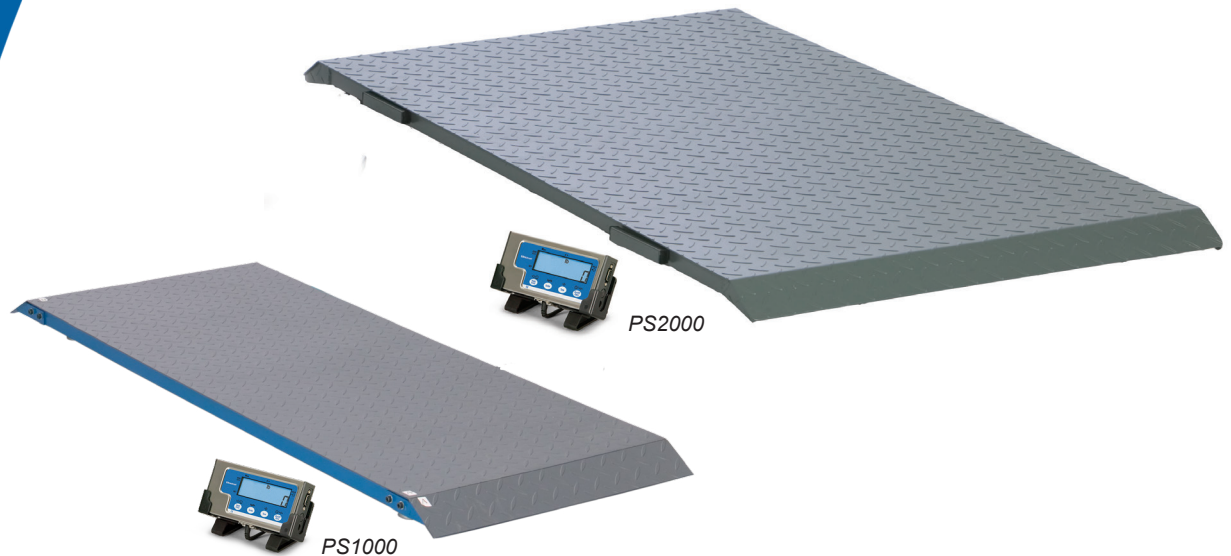

The PS1000 and PS2000 Portable Floor Scales have a rugged tread plate steel platform, ideal for weighing larger animals, pets, and goods. No installation or maintenance is required - simply place on a hard, level surface and adjust the footpads. Ramped ends provide easy access for livestock and equipment like jacks or trolleys.

They feature a rust-proof stainless-steel top, low-profile base, and an ABS/steel-housed indicator. Each scale includes a standard RS-232 port for printing data or interfacing with UPS/NCI shipping software.

The convenient Hold Weight mode freezes the last weight shown on the screen, allowing hands-free operation.

Dual power options - battery and AC adapter - support both portable use and permanent installation on a wall or desk.



Accuracy
Within 0.1%



Capacity
PS1000: 1000 lb x 0.5 lb / 500 kg x 0.2 kg
PS2000: 2000 lb x 1.0 lb / 1000 kg x 0.5 kg



Power
9 VDC, 600mA adapter (included) or four AAA batteries (not included)



Display
Five 0.625" / 17 mm digits LCD



Construction
Rugged steel with tread plate surface and stainless steel/ABS indicator



Operator Keys
On/Off/Zero, Tare, Unit, Hold/Print

VALUE IN
WEIGHING

PS1000 / PS2000 Floor Scales

SBI 140 Specifications

Unit: lb, lb/oz, kg

Functions: Animal weighing mode (hold), stable weight indicators with auto power off

Overload Capacity: Capable of withstanding 150% capacity of weight without damaging scale

COMM Port: RS-232, bi-directional, full duplex (cable not included)

Calibration: Front panel accessible

Battery Life: Battery life approximately 20 hours continuous

Operating Temperature:

41° F to 95° F / 5° C to 35° C

Product Dimension (L x W x H):

6.5" x 1.2" x 3.2"

165 mm x 30 mm x 81 mm

Packaging Dimension (L x W x H):

9.25" x 7.25" x 3"

235 mm x 184 mm x 76 mm

Certifications: RoHS, WEEE, Prop65 and FCC compliant, ETL, UKCA/CE

PS1000 / PS2000 Specifications

Adjustable Foot Pads: To work on uneven surfaces

Two Handles: Easily relocate

Ramped Ends

Product Dimension (L x W x H):

PS1000: 55.75" x 20.25" x 2.5"
1416 mm x 514 mm x 64 mm

PS2000: 59" x 30" x 2.5"
1498 mm x 762 mm x 64 mm

Packaging Dimension (L x W x H):

PS1000: 57.5" x 22" x 4"
1461 mm x 559 mm x 102 mm

PS2000: 64" x 36" x 7"
1626 mm x 914 mm x 178 mm

Shipping Weight:

PS1000: 77 lb / 35 kg

PS2000: 124 lb / 56 kg

Accessories/Options (not included):

Floor Stand (L x W x H): 810036380355

13.8" x 13.8" x 1" / 350 mm x 350 mm x 25 mm
overall height 37" / 940 mm

weight 10 lb / 4.5 kg

PS1000 Rubber Mat Kit: 816965007073


PS2000 Rubber Mat Kit: 816965007080



PS1000 shown with optional indicator stand



PS2000 shown with optional indicator stand

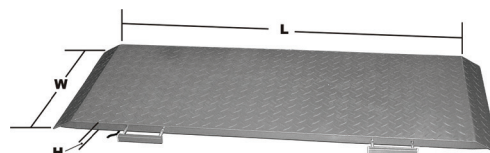

**STAY
CONNECTED
WITH US!**



Brecknell®

brecknellscales.com