


Light Capacity Platform Scales

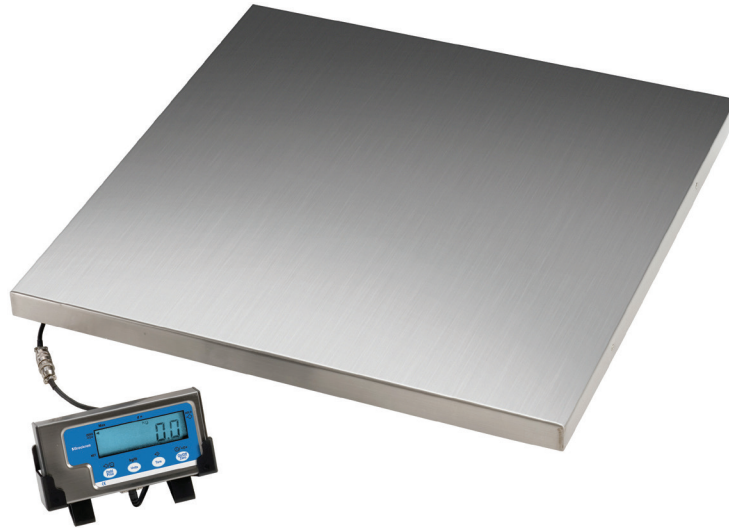

The WS300 Light Capacity Floor Scale is a compact and versatile weighing solution designed for general use with capacities up to 300 lb. Perfect for areas with limited space, it is ideal for shipping and receiving zones as well as production lines

This scale boasts a rust-resistant stainless steel platform, a sleek low-profile base, and a durable ABS and steel indicator housing. It comes equipped with a standard RS232 port for easy data printing or integration with UPS/NCI shipping software.

The convenient Hold Weight function locks the most recent weight reading on the display, enabling hands-free operation.

With dual power options—battery and AC adapter—the scale supports both portable use and fixed installation on walls or desks. Optional accessories include a 34". WS300-90 includes green rubber mat.

**Accuracy**

Within 0.1% of full capacity

**Capacity**

300 kg x 0.05 kg / 660 lb x 0.1 lb

**Power**

Four AAA batteries (not included)
or 9 VDC, 600mA adapter

**Display**

Five digit 17 mm / 0.625" high
with seven segment LCD

**Construction**

Low profile stainless steel
platform with mild steel understructure,
stainless steel/ABS indicator will wall
bracket and desk mount included

**Operating Keys**

On/Off/Zero, Tare, Units,
Hold/Print

WS300 Light Capacity Platform Scales

Specifications

Unit: kg, lb, lb/oz

Overload Capacity: Capable of withstanding 150% capacity of weight without damaging scale

COMM Port: RS232, bi-directional, full duplex (cable not included)

Annunciators: Zero, net, hold, kg/lb

Calibration: Front panel accessible

Battery Life: 20 hours

Operating Temperature:
5° C to 35° C / 41° F to 95° F

Platform Dimension (L x W x H):
WS300-55: 550 mm x 550 mm x 60 mm
21.6" x 21.6" x 2.3"
WS300-90: 900 mm x 550 mm x 60 mm
35.4" x 35.4" x 2.3"

Indicator Dimension (L x W x H):

165 mm x 30 mm x 81 mm
6.5" x 1.2" x 3.2"

Product Weight:

WS300-55: 15 kg / 33 lb
WS300-90: 17 kg / 37 lb

Packaging Dimension (L x W x H):

WS300-55: 690 mm x 690 mm x 140 mm
WS300-90: 1030 mm x 690 mm x 140 mm

Shipping Weight:

WS300-55: 17 kg / 37 lb
WS300-90: 19 kg / 41 lb (includes rubber mat)

Certifications: FCC compliant, Prop 65, UL /CUL power adapter, UKCA, CE, RoHS 3, WEEE



*Shown with optional indicator stand and
WS300-90 with rubber mat*

**STAY
CONNECTED
WITH US!**



@brecknell-scales



@brecknell_scales

Brecknell

www.brecknellscales.com

Part of Avery Weigh-Tronix

Brecknell is part of Avery Weigh-Tronix. Avery Weigh-Tronix is a trademark of Illinois Tool Works group of companies whose ultimate parent company is Illinois Tool Works Inc ("Illinois Tool Works"). Copyright © 2025 Illinois Tool Works. All rights reserved. This publication is issued to provide outline information only and may not be regarded as a representation relating to the products or services concerned. This publication was correct at the time of going to print, however Avery Weigh-Tronix reserves the right to alter without notice the specification, design, price or conditions of supply of any product or service at any time.

WS300_RoW_L_100141.indd
V7 AWT35-100141