




PS1000 / PS2000

Floor Scales

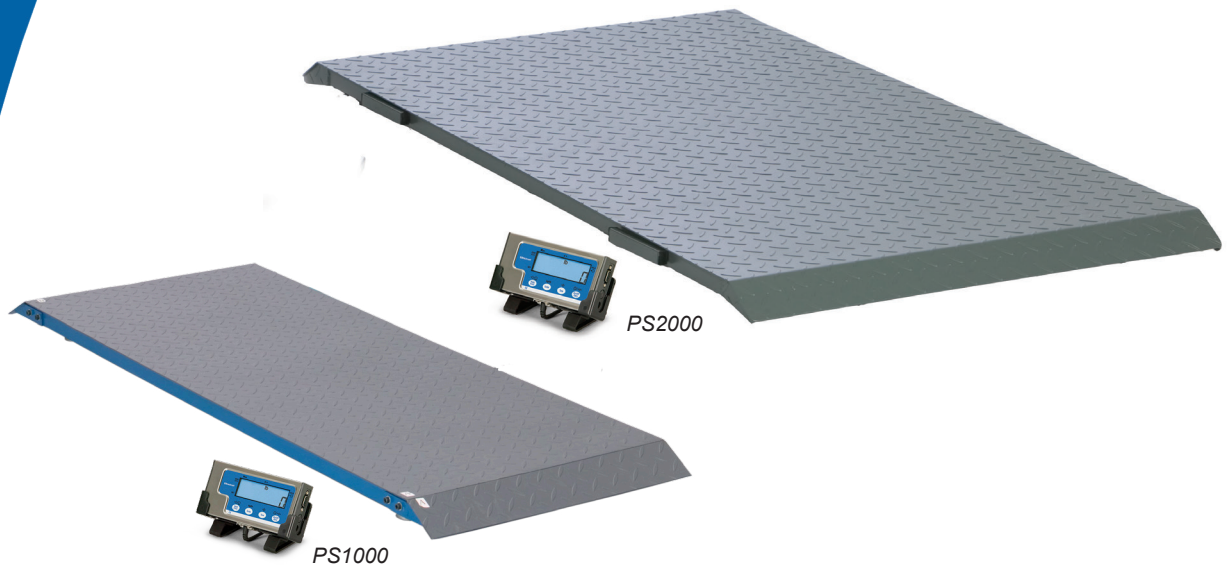

The PS1000 and PS2000 Portable Floor Scales have a rugged tread plate steel platform, ideal for weighing larger animals, pets, and goods. No installation or maintenance is required - simply place on a hard, level surface and adjust the footpads. Ramped ends provide easy access for livestock and equipment like jacks or trolleys.

They feature a rust-proof stainless-steel top, low-profile base, and an ABS/steel-housed indicator. Each scale includes a standard RS-232 port for printing data or interfacing with UPS/NCI shipping software.

The convenient Hold Weight mode freezes the last weight shown on the screen, allowing hands-free operation.

Dual power options - battery and AC adapter - support both portable use and permanent installation on a wall or desk.



Accuracy
Within 0.1%



Capacity

PS1000: 500 kg x 0.2 kg / 1000 lb x 0.5 lb
PS2000: 1000 kg x 0.5 kg / 2000 lb x 1.0 lb



Power

9 VDC, 600mA adapter (included) or
four AAA batteries (not included)



Display

Five 16 mm / 0.625" digits LCD



Construction

Rugged steel with tread plate surface
and stainless steel/ABS indicator



Operating Keys

On/Off/Zero, Tare, Unit, Hold/Print

VALUE IN
WEIGHING

PS1000 / PS2000 Floor Scales

SBI 140 Specifications

Unit: kg, lb, lb/oz

Functions: Animal weighing mode (hold), stable weight indicators with auto power off

Overload Capacity: Capable of withstanding 150% capacity of weight without damaging scale

COMM Port: RS-232, bi-directional, full duplex (cable not included)

Calibration: Front panel accessible

Battery Life: Battery life approximately 20 hours continuous

Operating Temperature:

5° C to 35° C / 41° F to 95° F

Product Dimension (L x W x H):

165 mm x 30 mm x 81 mm
6.5" x 1.2" x 3.2"

Packaging Dimension (L x W x H):

235 mm x 184 mm x 76 mm
9.25" x 7.25" x 3"

Certifications: RoHS, WEEE, Prop65 and FCC compliant, ETL, UKCA/CE

PS1000 / PS2000 Specifications

Adjustable Foot Pads: To work on uneven surfaces

Two Handles: Easily relocate

Ramped Ends

Product Dimension (L x W x H):

PS1000: 1416 mm x 514 mm x 64 mm
55.75" x 20.25" x 2.5"

PS2000: 1498 mm x 762 mm x 64 mm
59" x 30" x 2.5"

Packaging Dimension (L x W x H):

PS1000: 1461 mm x 559 mm x 102 mm
57.5" x 22" x 4"

PS2000: 1626 mm x 914 mm x 178 mm
64" x 36" x 7"

Shipping Weight:

PS1000: 35 kg / 77 lb

PS2000: 56 kg / 124 lb

Accessories/Options (not included):

Floor Stand (L x W x H): 810036380355

350 mm x 350 mm x 25 mm / 13.8" x 13.8" x 1"
overall height 940 mm / 37"
weight 4.5 kg / 10 lb

PS1000 Rubber Mat Kit: 816965007073


PS2000 Rubber Mat Kit: 816965007080



PS1000 shown with optional indicator stand



PS2000 shown with optional indicator stand

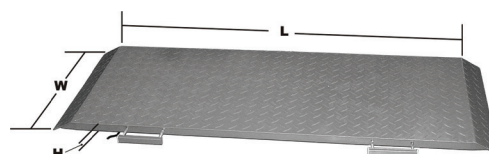

STAY
CONNECTED
WITH US!



@brecknell-scales



@brecknell_scales

Brecknell
www.brecknellscales.com

Part of Avery Weigh-Tronix

Brecknell is part of Avery Weigh-Tronix. Avery Weigh-Tronix is a trademark of Illinois Tool Works group of companies whose ultimate parent company is Illinois Tool Works Inc ("Illinois Tool Works"). Copyright © 2025 Illinois Tool Works. All rights reserved. This publication is issued to provide outline information only and may not be regarded as a representation relating to the products or services concerned. This publication was correct at the time of going to print, however Avery Weigh-Tronix reserves the right to alter without notice the specification, design, price or conditions of supply of any product or service at any time.

PS1000_PS2000_RoW_L_100121.indd
V6 AWT35-100121