


WS15/WS60WS120

Light Capacity Platform Scales

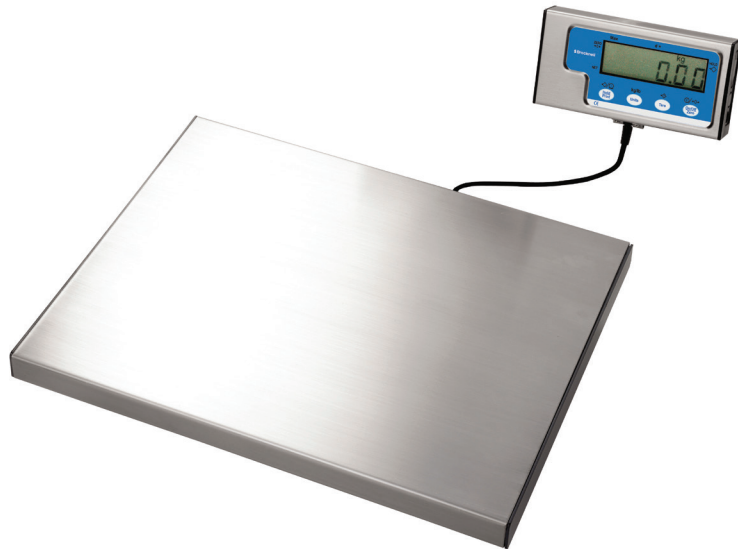

WS15, WS60 and WS120 bench scales offer the user a competitively priced bench scale with 1:3000 resolution - giving 15 kg x 5g, 60 kg x 20 g or 120 kg x 50 g performance, incorporating four full load bridge load cells, with self-levelling feet.

The tough low profile platform has a brushed stainless steel top for ease of cleaning and a generous platform size. It is mounted on four anti-slip rubber feet.

Three metres of cable connects the platform to the brushed stainless steel display pod which features clear 17 mm high LCD digits. A plastic display pod bracket is included to allow the display to be wall or bench mounted.

Key display features are on/off; push button tare to enable weights of empty containers to be removed and net weight only displayed; kg / lb switching to give readings in either metric or imperial measures and hold which allows the weight to be frozen, even when the package is removed.

To extend battery life an auto-off feature is standard, with the scale switching itself off after 2 minutes of inactivity.



Accuracy

Within 0.15% of full capacity



Capacity

WS15: 15 kg x 5 g / 30 lb x 0.01 lb
WS60: 60 kg x 20 g / 130 lb x 0.05 lb
WS120: 120 kg x 50 g / 260 lb x 0.1 lb



Power

Four AAA batteries or 9 VDC,
600mA adapter (both included)



Display

Five 17 / 0.625" mm digits
LCD with backlight



Construction

Low profile stainless steel platform with mild steel understructure, stainless steel/ABS indicator wall bracket and desk mount included



Operating Keys

On/Off/Zero, Tare, Units, Hold

WS15/WS60/WS120 Portable Bench Scale

Specifications

Capacity:

WS15: 15 kg x 5 g / 30 lb x 0.01 lb

WS60: 60 kg x 20 g / 130 lb x 0.05 lb

WS120: 120 kg x 50 g / 260 lb x 0.1 lb

Overload Capacity: Capable of withstanding 150% capacity of weight without damaging scale

Power: 9V 600mA UK/EU power adapter (included) or four 1.5 volt AAA batteries (not included)

Platform Dimension (L x W x H):

380 mm x 300 mm x 27 mmh

Display Pod Dimension (L x W x H):

158 mm x 80 mm x 27 mm

Display: Five digit 17 mm / 0.625" high with seven segment LCD

Function Keys: On/off; tare; kg/lb; hold

Annunciators: Zero; net; hold; kg/lb

Tare: 100% subtractive

Operating Temperature: +5° C to +40° C

Product Weight: 3.9 kg

Packaging Dimension (L x W x H):

450 mm x 400 mm x 60 mm

Shipping Weight: 5 kg

Certifications: FCC compliant, Prop 65, UL/CUL power adapter, UKCA, CE, RoHS 3, WEEE



WS15 for use in portion control applications

Brecknell

www.brecknellscales.com

www.brecknellscales.co.uk

Part of Avery Weigh-Tronix

Brecknell is part of Avery Weigh-Tronix. Avery Weigh-Tronix is a trademark of Illinois Tool Works group of companies whose ultimate parent company is Illinois Tool Works Inc ("Illinois Tool Works"). Copyright © 2022 Illinois Tool Works. All rights reserved. This publication is issued to provide outline information only and may not be regarded as a representation relating to the products or services concerned. This publication was correct at the time of going to print, however Avery Weigh-Tronix reserves the right to alter without notice the specification, design, price or conditions of supply of any product or service at any time.

WS15WS60WS120_RoW_L_1000140.indd
V2 AWT35-100140