


# Brecknell

## DCSB Floor Scale



The robust DCSB Industrial Floor Scale is used for a wide range of general weighing applications where palletized goods are constantly being weighed or moved around by pallet jacks or forklifts. Ideal for any busy assembly areas or goods receiving / shipping areas.

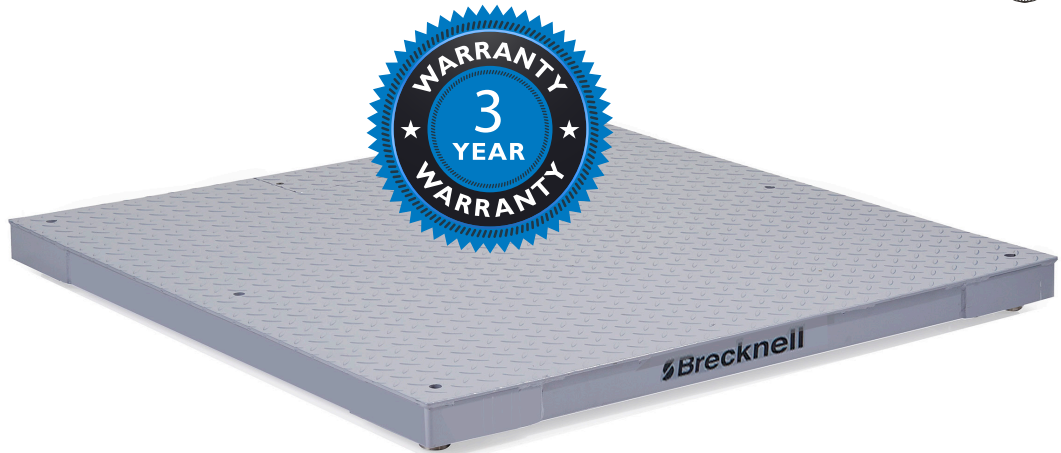

### Accuracy

NTEP at 5000d, Class III, 3000d OIML



### Capacity

2500 x 0.5 lb / 1250 x 0.2 kg  
5000 x 1 lb / 2500 x 0.5 kg  
10,000 x 2 lb / 5000 x 1 kg



### Load Cells

Four NTEP/ OIML C3 approved Alloy Steel IP68 load cells



### Low Profile

3.1" / 79 mm high; 1.75" / 44 mm adjustable leveling feet



### Construction

Carbon steel fabrication with 1/4" / 6 mm thick safety tread top plate & heavy duty welded channel under structure, 150% overload protection



### Junction Box

Top access

VALUE IN  
WEIGHING

# DCSB Floor Scale

## Specifications

**Versatile:** Pit mounted or free standing

**Deck Construction:** Fabricated from high quality carbon steel with a 1/4" / 6 mm hard wearing checker plate top deck structure with specially designed folded channel understructure to maximize strength where needed

**Finish:** Powder coat paint

**Load Cell:** NTEP / OIML approved, IP68 potted 350 ohm +/-3.5Ω alloy steel load cells

**Load Cell Rated Output:** 3mv/V

**J-Box:** IP65 ABS junction box with floor scale top access for easy installation and service

**Leveling Feet:** Four adjustable leveling feet with top hole access for a quick adjustment

**Threaded Eye Bolts:** Two threaded top access eye-bolt holes for easy mobility and pit service

**Corner Protection:** Closed corners to prevent damage to leveling feet

**Overload Protection:** 150% of rated capacity

**Capacity and Resolution:**

Model	Capacity	Dimension (in)	Dimension (mm)
DCSB3636-2.5	2500 lb x 0.5 lb 1250 kg x 0.2 kg	36 x 36 x 3.1	914 x 914 x 79
DCSB4848-05	5000 lb x 1 lb 2500 kg x 0.5 kg	48 x 48 x 3.1	1219 x 1219 x 79
DCSB5959-05	5000 lb x 1 lb 2500 kg x 0.5 kg	59 x 59 x 3.1	1500 x 1500 x 79
DCSB4848-10	10,000 lb x 2 lb 5000 kg x 1 kg	48 x 48 x 3.1	1219 x 1219 x 79
DCSB5959-10	10,000 lb x 2 lb 5000 kg x 1 kg	59 x 59 x 3.1	1500 x 1500 x 79

**Floor Scale Height Adjustment:** min 3.1" / 79 mm; max 4.1" / 104 mm

**Certifications:** NTEP CC #02-070

## Rugged Construction



Wide channel design for superior durability

**Warranty:** Includes three year parts on DCSB deck from time of purchase. Consult factory.


## Options

**Ramps:** Up to four ramps can be used with the DCSB family

**Indicators:** The DCSB can be used with a variety of electronic indicators

**Pit Frames:** Mild steel frames

**Indicator Stand:** 48" / 1219 mm high, mild steel, powder coat painted, for the Brecknell indicator. Includes stand, mounting hardware and floor mount baseplate.

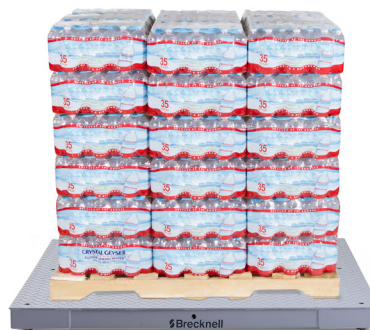

**Brecknell®**

brecknellscales.com

brecknellscales.co.uk