



PS Slimline Series

Portable Shipping Scale




The PS150 and PS400 Slimline Bench Scale is a strong, robust, general purpose, scale particularly suited to a wide range of warehouse and portable weighing applications.

This easy-to-use, portable scale offers exceptional value for your money while making fast, easy work out of weighing parcels or boxes. The PS150 and PS400 Slimline are ideal for use in warehouse shipping/receiving areas and mail rooms along with other general weighing applications.

This dual-powered platform operates from an AC adapter (included) or four AA batteries (not included) that provide up to 168 hours of battery life, making it ideal for portable applications without the need to find power outlets.

Featuring just three large, raised keys and a highly visible LCD display with 1.2 inch high digits, the PS150 and PS400 Slimline is easy-to-operate, even when wearing gloves.

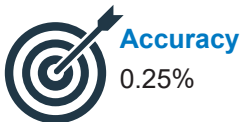

Accuracy
0.25%



Capacity
150 lb x 0.1 lb / 70 kg x 0.05 kg
400 lb x 0.2 lb / 180 kg x 0.1 kg



Power
9V 1A power supply with USA/UK adapters (included) or four AA batteries (not included)



Display
Easy-to-read LCD display
1.2" / 30 mm high digits



Construction
Low profile, portable, aluminum diecast base with ribbed and powder coated top plate. ABS desktop and wall mount indicator casing.



Operator Keys
Tare, On/Off, Unit

VALUE IN WEIGHING

PS Slimline Series Portable Shipping Scales

Specifications

Capacity: 150 lb x 0.1 lb / 70 kg x 0.05 kg
400 lb x 0.2 lb / 180 kg x 0.1 kg

Display: 1.2" / 25 mm LCD

Base Construction: Low profile, hard-wearing die cast base with ribbed top surface and a powder coated finish (110% overload protection)

Indicator: Easy-to-read 1.2" / 30 mm high digits, backlit LCD display in a compact, lightweight, and rugged ABS housing with 2 - 10 feet / 60 cm - 3 m coiled cable. Desktop and wall mount.

Operator Keys: On/Off, Tare/Zero, and Units

Features: General weighing in lb, lb/oz, or kg with auto power off if not used for five minutes

Battery Life: Up to 168 hours

Power: External 100-240V AC power adapter with US and UK plugs (included) or four AA batteries (not included)

Platform Dimension (L x W x H):

12" x 12" x 1"
300 mm x 300 mm x 25 mm

Product Weight: 3.5 lb / 1.5 kg

Packaging Dimension (L x W x H):

19.3" x 13.1" x 1.97"
490 mm x 332 mm x 49 mm

Certifications: FCC compliant, Prop 65, UL/CUL power adapter, UKCA, CE, RoHS 3, WEEE



Wall mounting accessories (included)

Brecknell®

brecknellscales.com

brecknellscales.co.uk

Part of Avery Weigh-Tronix

Brecknell is part of Avery Weigh-Tronix. Avery Weigh-Tronix is a trademark of Illinois Tool Works group of companies whose ultimate parent company is Illinois Tool Works Inc ("Illinois Tool Works"). Copyright © 2022 Illinois Tool Works. All rights reserved. This publication is issued to provide outline information only and may not be regarded as a representation relating to the products or services concerned. This publication was correct at the time of going to print, however Avery Weigh-Tronix reserves the right to alter without notice the specification, design, price or conditions of supply of any product or service at any time.

PSSlimlineSeries_L_100010.indd
V32 AWT35-100010